

How to read a L&G SMETS 2 E470 meter



The main screen on the meter is already defaulted to the Import Register which shows your reading. Please use this when submitting your meter reading.

If you're a 2 rate customer, follow these steps;

1. From the main screen, press and hold the button B, this will take you to the Tariff Display List
2. The first screen will show you the first rate
3. Pressing button A will show you the next rate