

How to read a Honeywell SMETS 2 AS302P meter

- Push button A to wake up the display backlight and display the 'General' menu.



- Push button B to step through menu options: 'General', then 'Boost', and then 'Registers' menus will be displayed.



- Select the 'Registers' menu by pressing button A.

- Push button B to step through menu options: 'Cumulative', then 'Rates in Use', and then 'Rates 1-48' menus will be displayed.



- Select the 'Rates 1-48' menu by pressing button A.
- Use the push button B to step through menu options: 'Imp. R1', 'Imp. R2', 'Imp. R3' AND SO ON, up to 'Imp. R48'.
 - *Imp R1* for single-rate tariffs
 - *Imp R1* and *Imp R2* for 2-rate tariffs
 - *Imp R1*, *Imp R2*, and *Imp R3* for 3-rate tariffs
- Please use the correct Rate(s) meter reading value(s) in kWh, which are relevant to your tariff.

