

How to read your EMLITE EMP1 Three Phase meter

Main Display


Total Active import




Test Display



Date

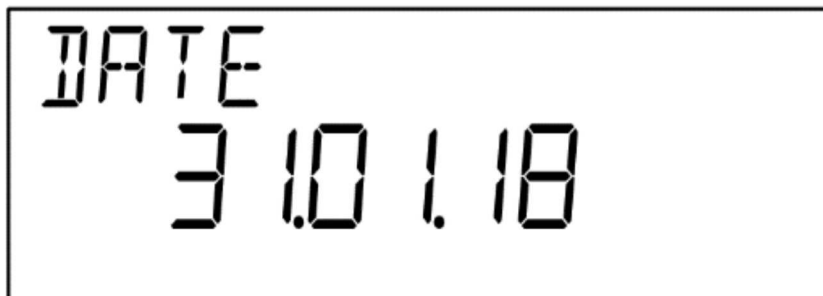

Time

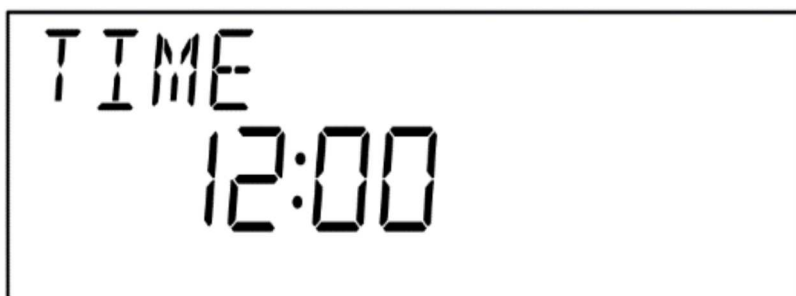

Active Rate

RATE 1 *
0000000.00
IMPORT → kWh

Additional rates will be shown dependant on SSC.

RATE 1
0000000.00
IMPORT → kWh

RATE 2
0000000.00
IMPORT → kvarh

Tariff name SSC

OFF PEAK
00-0700

The extended display is gained by a long press (3 seconds) of the display button.

Signal strength



L1 Voltage L2 Voltage L3 Voltage



L1Current L2 Current L3 Current



Total Active export



Total Reactive import



Total reactive export



Max Demand Import

Max Demand Apparent

Max Demand Reset Count

Rising Demand Import

Rising Demand Apparent

Firmware version

End Display