




Reading the Iskraemeco MT375 Meter


The Iskraemeco MT375 polyphase meter is read automatically each night. You can still check the reads manually on the display anytime you wish. This document explains the display sequence.

The display scrolls automatically without the need to press any buttons on the meter.


LCD Display

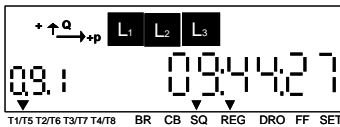


0.9.1 Current Time (BST or GMT depending on tariff)

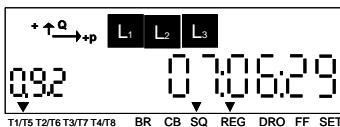


0.9.2 Current Date YY:MM:DD

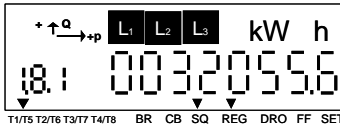


1.8.1 R1 kWh; 1.8.2 (R2), 1.8.3 (R3), etc. may follow

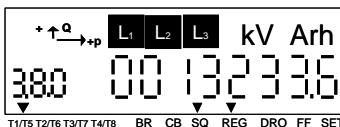


3.8.0 Total Lag kVarh

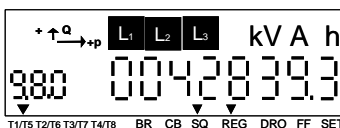


9.8.0 Total kVAh

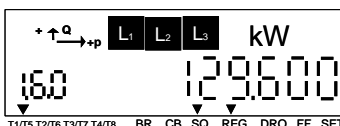


1.6.0 Max Demand kW

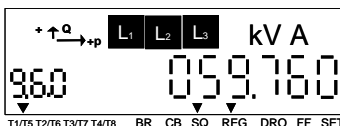

9.6.0 Max Demand kVA

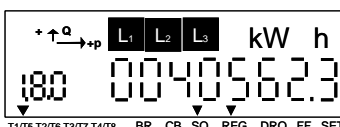

1.8.0 Total Import kWh

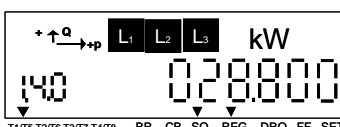

1.4.0 Current Interval Rising Demand kW

... other displays may follow before returning to the current time